

DART

DESIGN <i>CP</i>	DRAWN BY <i>CP</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA
CHECKED <i>KE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. DSI 9138
DATE 99.03.02		REV. A SHEET 1 OF 1
A	99.03.02	TITLE AS350/355 STEP 1 INSTALLATION SCALE NTS

DART SERVICE INSTRUCTION

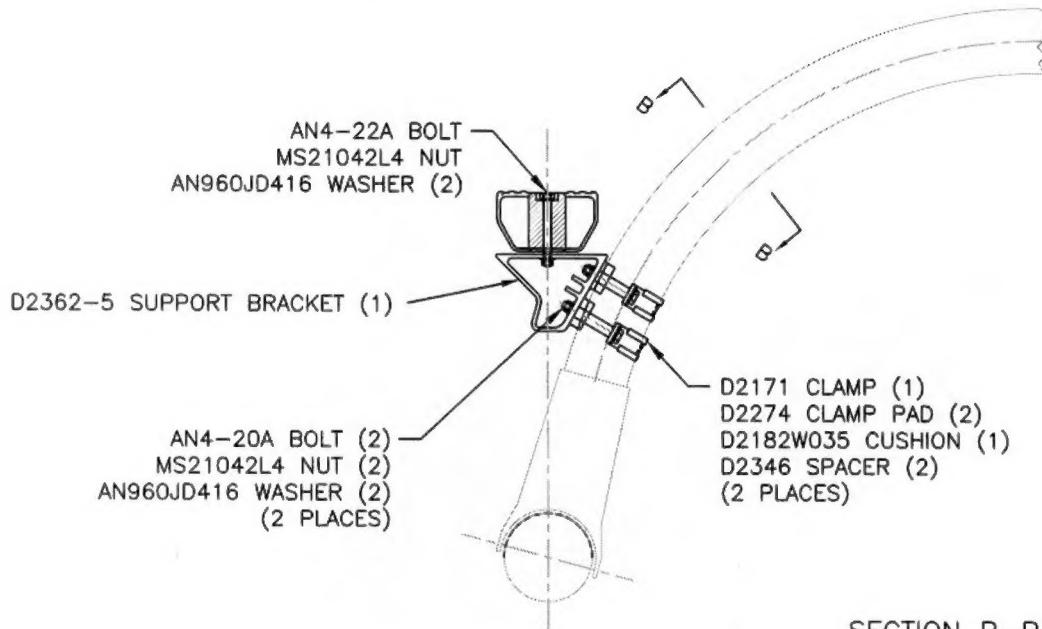
AMEND INSTALLATION DRAWING D350-591 REV. D

CANADIAN STA: SH92-6
US FAA STC: SH967NE

FOR D350-591-115 SHORT STEP – LO-SKID INSTALLATION:

REPLACE D2362-3 SUPPORT BRACKET WITH D2362-5 SUPPORT BRACKET.
INSTALL AS SHOWN BELOW:

SECTION A-A OF D350-591 REV. D PG. 5: STEP SUPPORT
FOR D350-591-115 ONLY

SECTION B-B: STEP SUPPORT